

## SNMP Settings

Product: Antikor v2 - Layer2 Tunnel Backbone  
Guides

# SNMP Settings

By performing SNMPv2 or SNMPv3 definitions on L2 Tunneling, statistics of Ethernet interfaces of AntiKor can be accessed from network monitoring programs.

SNMP Configurations ^

System Name

System Description

Contact

Location

SNMP Version

#	Status	Mode	Group Name	Allowed Networks	Transactions
<div style="display: flex; justify-content: center; gap: 10px;"> <span>&lt;&lt;</span> <span>&lt;</span> <span>&gt;</span> <span>&gt;&gt;</span> </div>					

Alan	Description
System Name	Specify name to be given to the system.
System Description	Enter required description for the system.
Contact	Enter contact information.
Location	Enter location.
SNMP Version	Choose either SNMP version v2 or v3.

## SNMPv2 Settings New Record

SNMP Configurations - New Record ×

Status  Active

Mode

Allowed Networks

Group Name

FIELD	DESCRIPTION
Status	Choose active or passive as status.
Mode	Choose either read-only or (read-write) mode.
Group Name	Enter SNMPv2 group name.

## SNMPv3 Settings New Record

### SNMP Configurations - New Record

**Status**  Active

**Mode**

**Allowed Networks**

**Username**

**Password**

**Auth Type**

**Privacy Protocol**

**Key**

FIELD	DESCRIPTION
Status	Choose active or passive as status.
Mode	Choose either read-only or (read-write) mode.
Allowed Networks	The network scope to access must be entered.
Username	Enter SNMPv3 username.
Password	Specify a password for a SNMPv3 user.
Auth Type	One of the encryption algorithms must be selected.
Privacy Protocol	Optionally, the symmetric encryption algorithm can be selected.
Key	If symmetric algorithm is selected, the key must be determined. This key must be the same as the counter-key information.



