

## L2TP/PPTP VPN Settings

Product: Antikor v2 - Next Generation Firewall  
Guides

## L2TP/PPTP VPN Settings

The IP address range to be used in the L2TP / PPTP VPN connection and the static IP to be assigned to local users is done in this section. Additionally, the number of sessions per person is determined on this screen.

L2TP/PPTP VPN Settings Reload

**Instructions**

The users listed on the L2TP page are users in Local Users in the "Authentication Rules" module. On this page, only the existing users can be assigned IP information.

**General Settings**

Operation Mode:  PPTP and L2TP  Only L2TP  Only PPTP

IPsec Encryption:  Passive

Max Login Limit per Person:

Start IP Address: IPv4

End IP Address: IPv4

Server IP: IPv4

DNS Server: IPv4

Save

XLS CSV PDF Show/Hide Records Per Page OK Filter Reset Filter

#	User Group	Username	IP Address	Description	Transactions
1	"Yerel L2TP/PPTP VPN Kullanıcıları"		10.255.0.100	test	<span>Edit</span>
2	"Yerel L2TP/PPTP VPN Kullanıcıları"				<span>Edit</span>

< 1 >

Go

FIELD	DESCRIPTION
Operation Mode	Select the operating mode for L2TP / PPTP VPN.
Max Login Limit per Person	Max Login Limit per Person is entered for the VPN connection created.
Start IP Address	VPN start IP address is entered.
End IP Address	End of the VPN IP address is entered.
Server IP	Server IP address is entered.
DNS Server	DNS server IP address is entered.

**Note:** L2TP and PPTP services must be connected through the default gateway. Otherwise, the connection problem is likely to occur.

**Note:** Some service providers don't migrate GRE packages. For this reason **L2TP over IPsec** if done, GRE can be moved to pass the password and the connection is established.

**epati Information Technologies LLC.**

Mersin Üniversitesi Çiftlikköy Kampüsü  
Teknopark İdari Binası Kat: 4 No: 411  
33343 Yenişehir / Mersin / TURKEY

[www.epati.com.tr](http://www.epati.com.tr)

[info@epati.com.tr](mailto:info@epati.com.tr)

+90 324 361 02 33

+90 324 361 02 39



